



## 1. REMOTE CONTROL

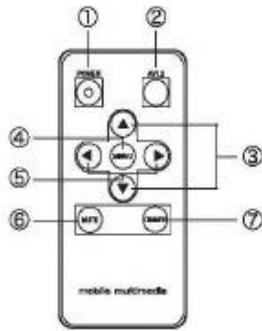

- 1) POWER ON-OFF BUTTON
- 2) CA1,CA2 SELECT BUTTON
- 3) UP-DOWN BUTTON
- 4) MENU SELECT BUTTON
- 5) VOLUME UP-DOWN BUTTON
- 6) MUTE ON-OFF BUTTON
- 7) DIMMER CONTROL BUTTON

## 2. SYSTEM WIRING

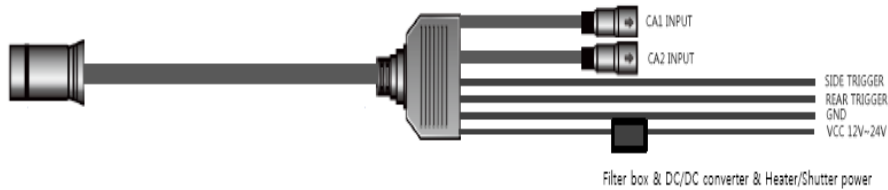

To MONITOR

CA1: REAR CAMERA INPUT REAR TRIGGER1  
 CA2: SIDE CAMERA INPUT SIDE TRIGGER2  
 GND  
 DC12 ~24V

## 3. OPERATION

- \* The signal is inputted TRIGGER1, CA1 video is displayed on the screen. TRIGGER1 removed, returned to its original state.
- \* The signal is inputted TRIGGER2, CA2 video is displayed on the screen. TRIGGER2 removed, returned to its original state
- \* Even if the trigger2 is removed, the side camera is maintained by the timer

## 4. Operation of the Menu

PICTURE	
BRIGHTNESS	50
CONTRAST	50
COLOR	50
TINT	50
SHARPNESS	50

- 1) Press the MENU button of the remote control. PICTURE will be displayed on the screen.
- 2) Select the function to be adjusted with (▼▲) button of the remote control, from the following.
  - \* BRIGHTNESS: Control of Brightness (0-100)
  - \* CONTRASR: Control of Contrast (0-100)
  - \* COLOR: Control of Color (0-100)
  - \* TINT: Control of Tint (0-100)
  - \* SHARPNESS: Control of Sharpness (0-100)
- 3) Adjust the selected function with the (◀▶) button.
- 4) when adjustment is completed ,press MENU button, then OSD will disappear

FUNCTION	
SIDE TIMER	2.0s
SCREEN	WIDE
TRANSPARENCY	60
SYSTEM	PAL

- 1) Press the Twice MENU button of the remote control. PICTURE will be displayed on the screen.
- 2) Select the function to be adjusted with (▼▲) button of the remote control, from the following.
  - \* SIDE TIMER : 2.0s/3.5s/5.0s/10s  
(Use to Adjust CA2 auto switching timer)
  - \* SCREEN : WIDE-NORMAL
  - \* TRANSPARENCY : 0-100
  - \* SYSTEM : SYSTEM INFORMATION
- 3) Adjust the selected function with the (◀▶) button.
- 4) when adjustment is completed ,press MENU button, then OSD will disappear

PARKING GUIDE OFF	
LEFT GUIDE	1
RIGHT GUIDE	1

- 1) Press the Three MENU button of the remote control. PICTURE will be displayed on the screen.
- 2) Select the function to be adjusted with (▼▲) button of the remote control, from the following.
  - \* PARKING GUIDE: ON/OFF
  - \* LEFT GUIDE : 1~3
  - \* RIGHT GUIDE : 1~3
- 3) Adjust the selected function with the (◀▶) button.
- 4) when adjustment is completed ,press MENU button, then OSD will disappear